

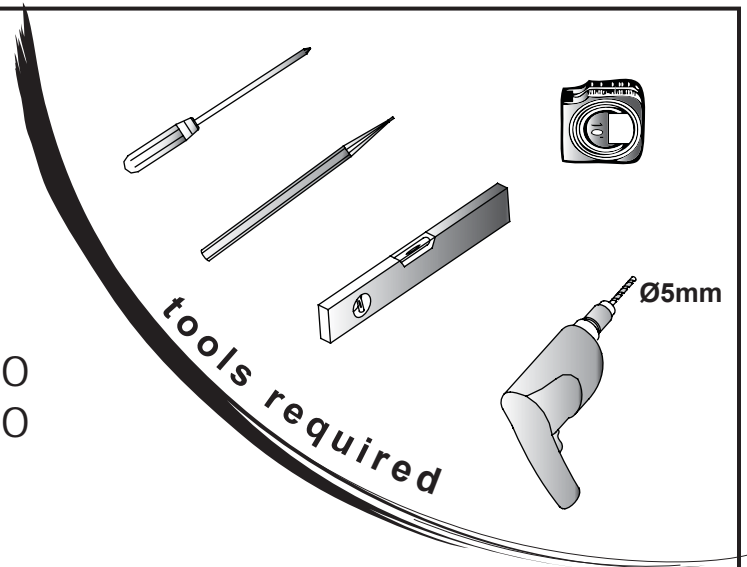
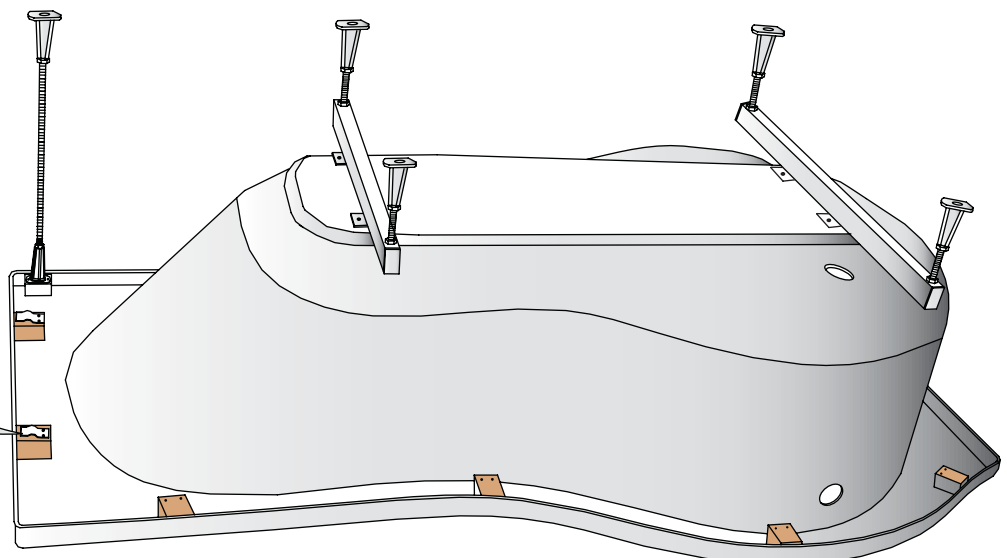
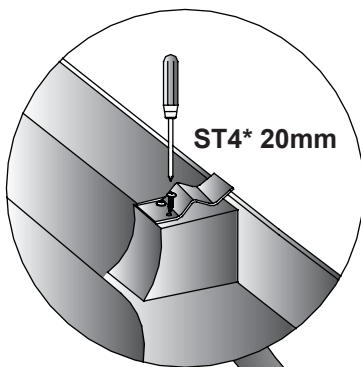




# INSTRUCTION

Shower Bath Front Panel 1700  
 Shower Bath Front Panel 1500  
 Shower Bath End Panel 700

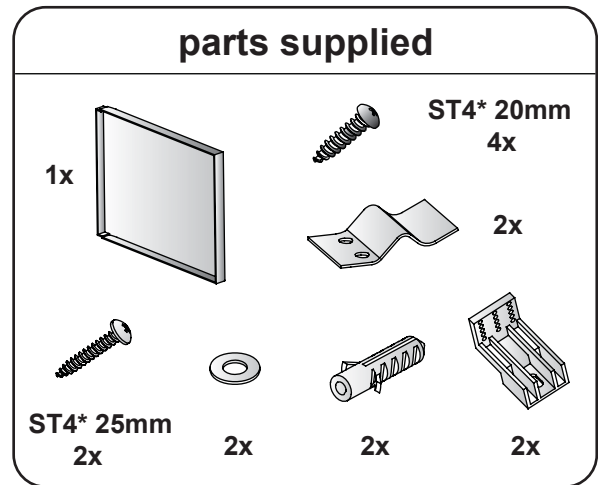

- Prior to installation check that all parts have been supplied.
- Assemble bath on a mat to protect against damage to bath surface.
- Follow each step in turn.
- This product requires a two person lift - use proper lifting techniques.
- This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person.

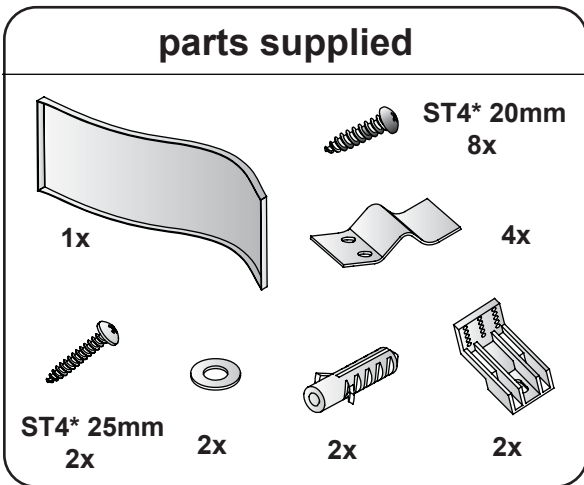

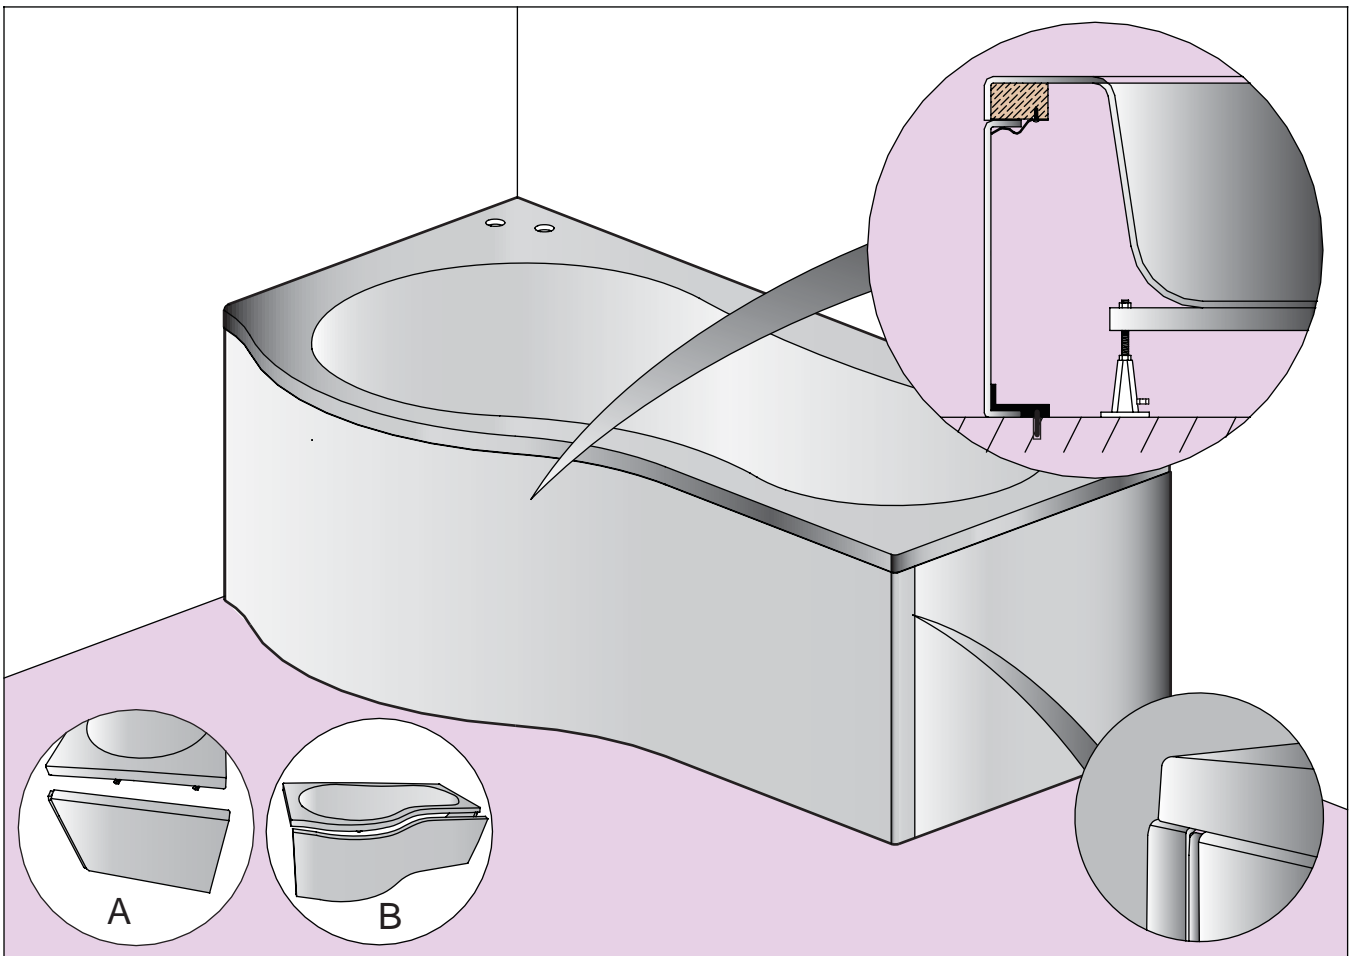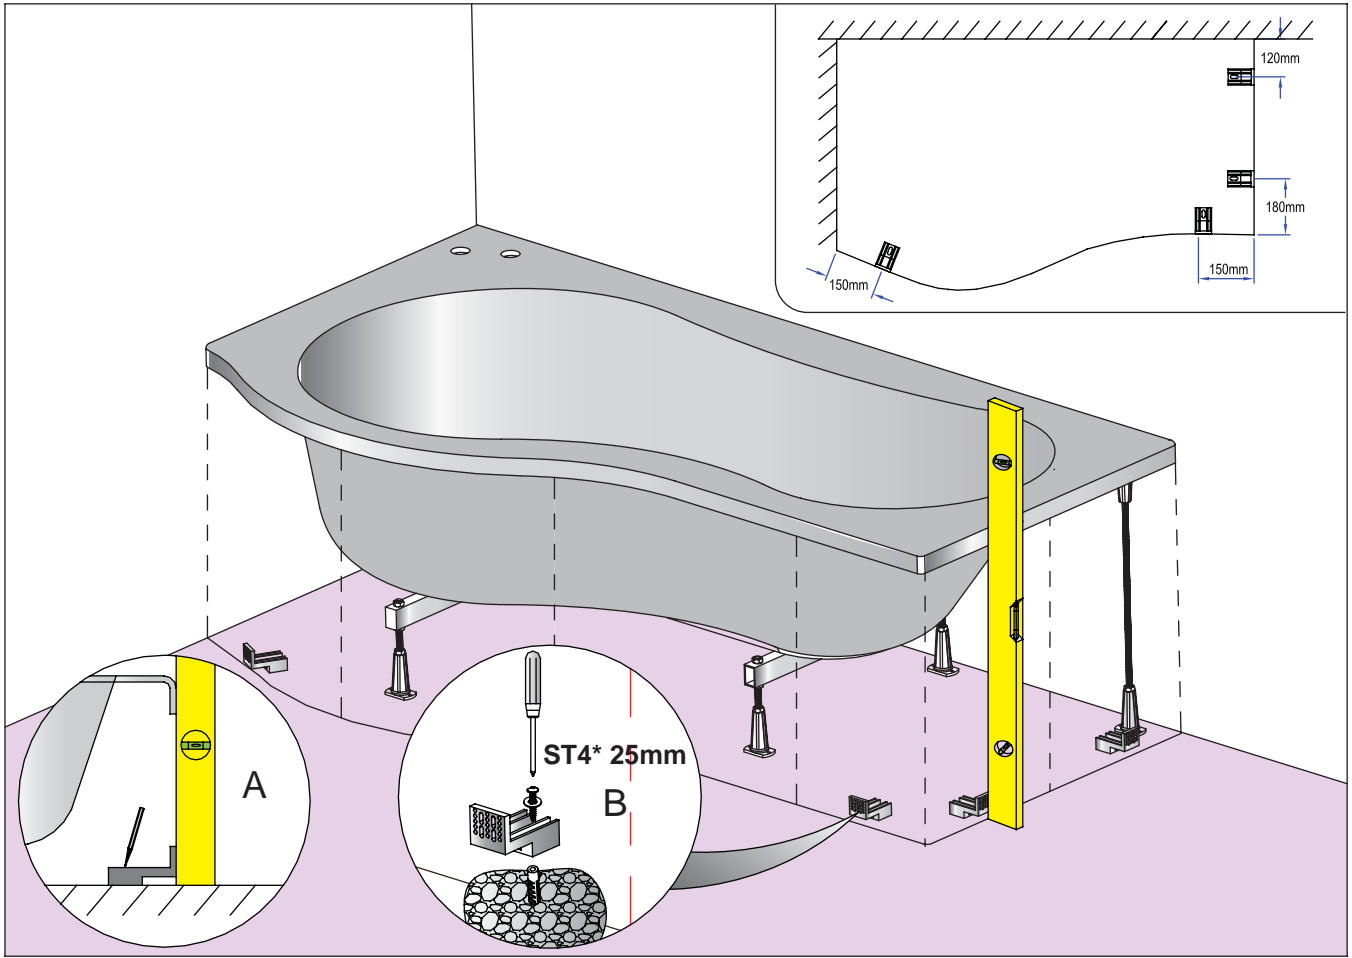

VICTORIA  
(03) 9768 3577

NEW SOUTH WALES  
(02) 9604 1620

SOUTH AUSTRALIA  
(08) 8374 0877

NORTHERN TERRITORY  
(08) 8947 0019

QUEENSLAND  
(07) 3208 9199

WESTERN AUSTRALIA  
(08) 9209 2299

NORTH QUEENSLAND  
(07) 3208 9199

TASMANIA  
(03) 6275 2600